Brief Remote Control Registration Guide

For our Product, you don't need an extra remote control but can use your current TV remote control by registering it to the Product so you can conveniently control both your TV and the Product just with one remote control at the same time.

■ Please check before registration

1. Remote control you want to register

You can register either your current TV remote control or other remote controls you rarely use.

2. TV remote control keys for the Product

Choose TV remote control keys you rarely use for the Product.



If you register your current TV remote control, you can conveniently use it both for your TV and the Product at the same time (Register the remote control keys you rarely use.)

■ How to register your remote control

(After entering into the registration mode III, press remote control keys one by one for registration.)

No.	Procedure	Remote registration button	Selected remote control keys		LED Status
			Example 1	Example 2	LLD Status
1	Entering into Registration Mode	Press for more than 1 secs			A blinking blue LED shows the key is correctly registered.
2	Registration of Move to Home key		T 29 P		A blinking blue LED shows the key is correctly registered.
3	Registration of 90° swing key				A blinking blue LED shows the key is correctly registered.
4	Registration of Preset Position Memory key			4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	A blinking blue LED shows the key is correctly registered.
5	Registration of Move to preset position key		(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)		A blinking blue LED shows the key is correctly registered.
6	Registration of Return to Original Position key & Getting out of registration mode		POWER	POWER	If the LED turns off, it shows that registration is finished.