






PROJECTA

MOUNTING INSTRUCTION
MONTAGEANLEITUNG
PRÉSCRIPTION DE MONTAGE
MONTAGE-INSTRUCTIE

PROSCREEN CSR


PROCINEMA CSR



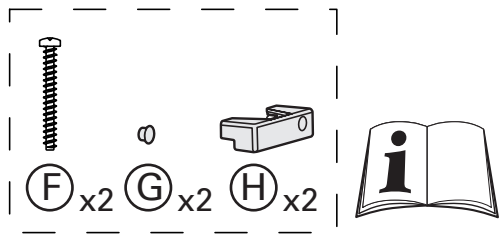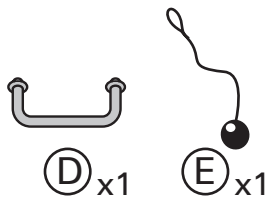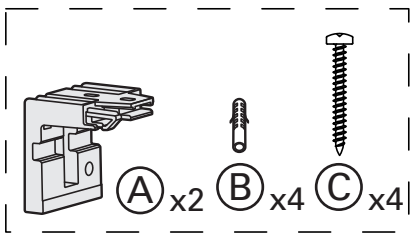

	L1	L2 +/- 420mm	L3
1600 mm	1714 mm	1134 mm	1620 mm
1800 mm	1914 mm	1334 mm	1820 mm
2000 mm	2134 mm	1554 mm	2040 mm
2200 mm	2334 mm	1754 mm	2240 mm
2400 mm	2534 mm	1954 mm	2440 mm

To adjust retraction speed
 Use a large flat screwdriver to turn the adjustment knob on the right end of the screen. To increase travel speed turn counterclockwise. To decrease the travel speed turn clockwise. Adjustments should be made in half turn increments and travel speed checked before adjusting further.

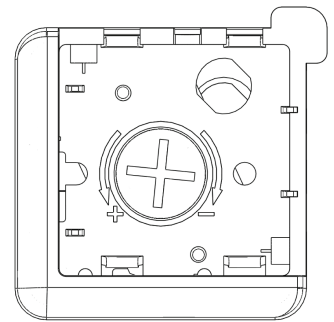

If the screen locks at the bottom and will not retract, turn adjustment knob one quarter turn counterclockwise.

